

TOORX
PROFESSIONAL LINE

INSTRUCTION



WBX150

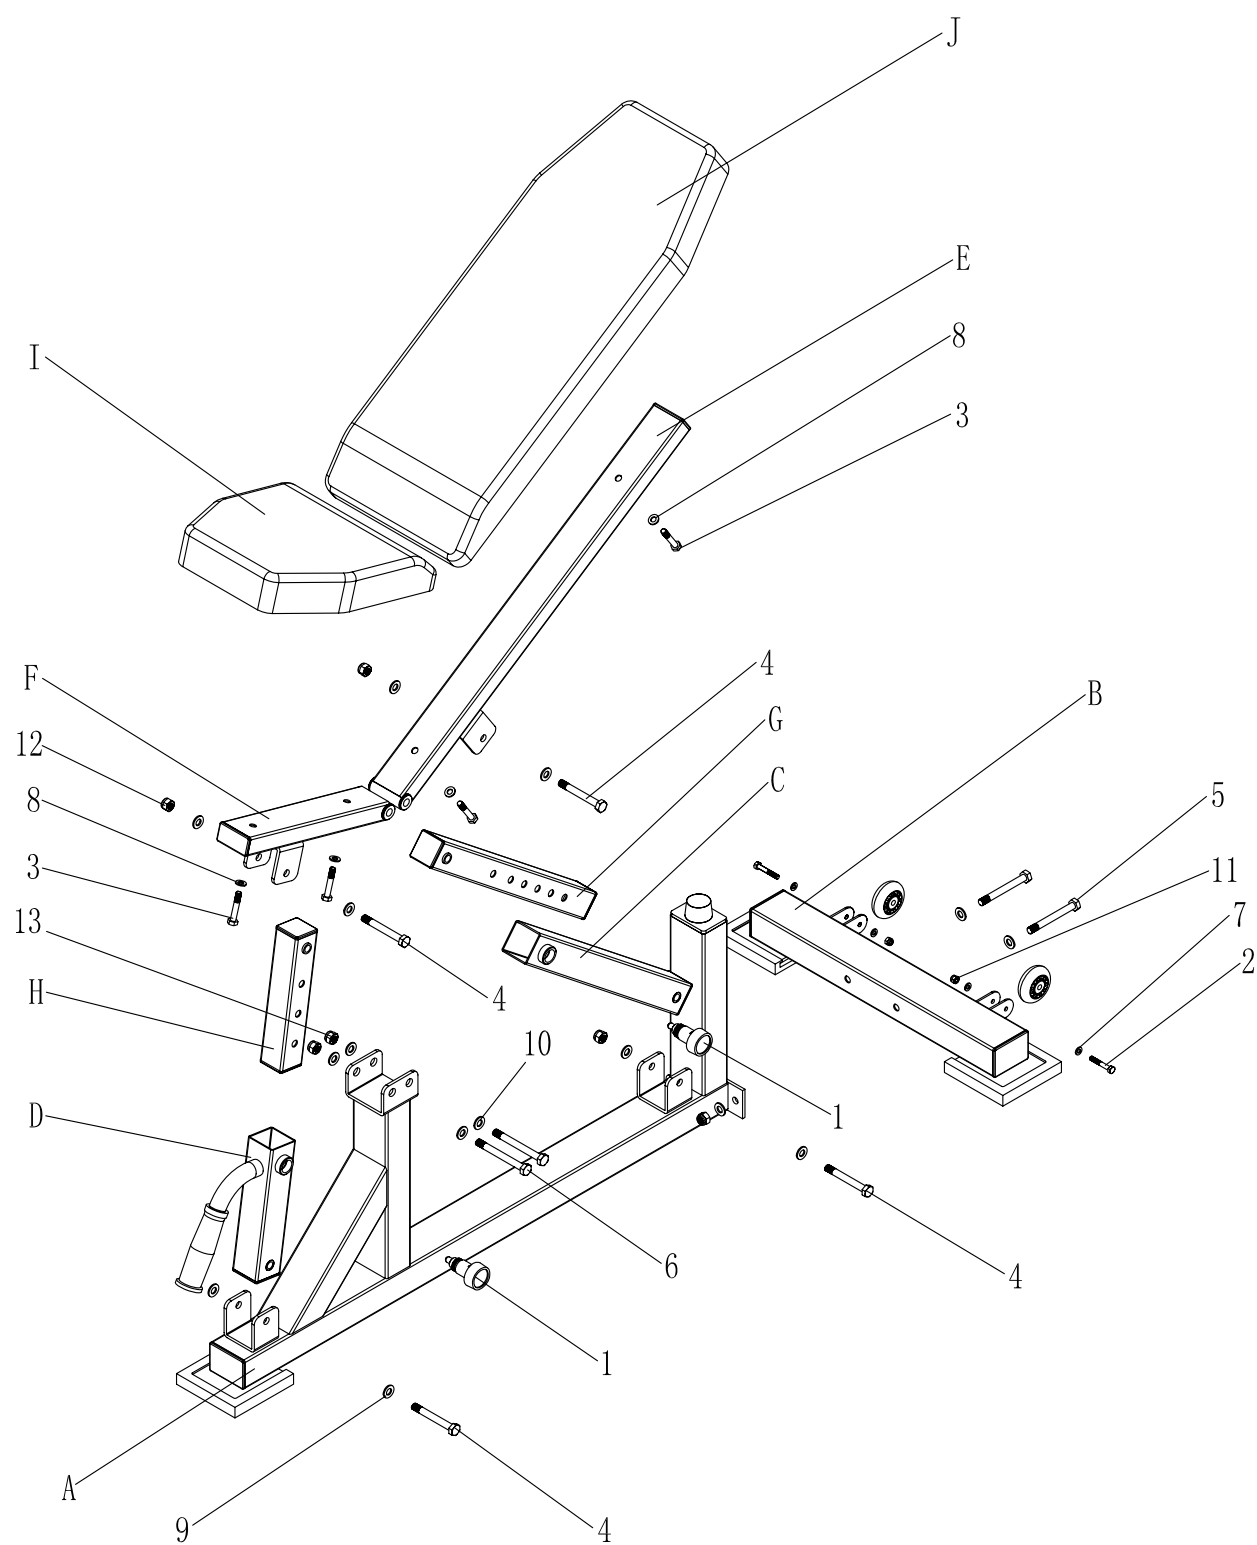


Cod: GRLDTOORXWBX150










Rev : 00

Ed : 07/18

Assembly Drawing




Part List

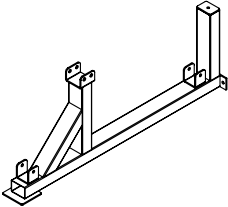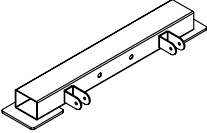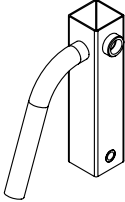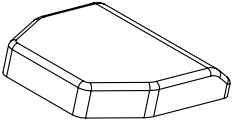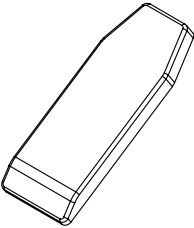A (1PCS) 	B (1PCS) 	C (1PCS) 	D (1PCS) 
E (1PCS) 	F (1PCS) 	G (1PCS) 	H (1PCS) 
I (1PCS) 	J (1PCS) 		

List


Serial number	Specification Name	Quantity
1	fast pin M20	2
2	bolt M6*40	2
3	bolt M8*45	4
4	bolt M10*80	4
5	bolt M10*90	2
6	bolt M12*100	2
7	washer $\phi 6$	4
8	washer $\phi 8$	4
9	washer $\phi 10$	12
10	washer $\phi 12$	4
11	lock nut M6	2
12	lock nut M10	6
13	lock nut M12	2

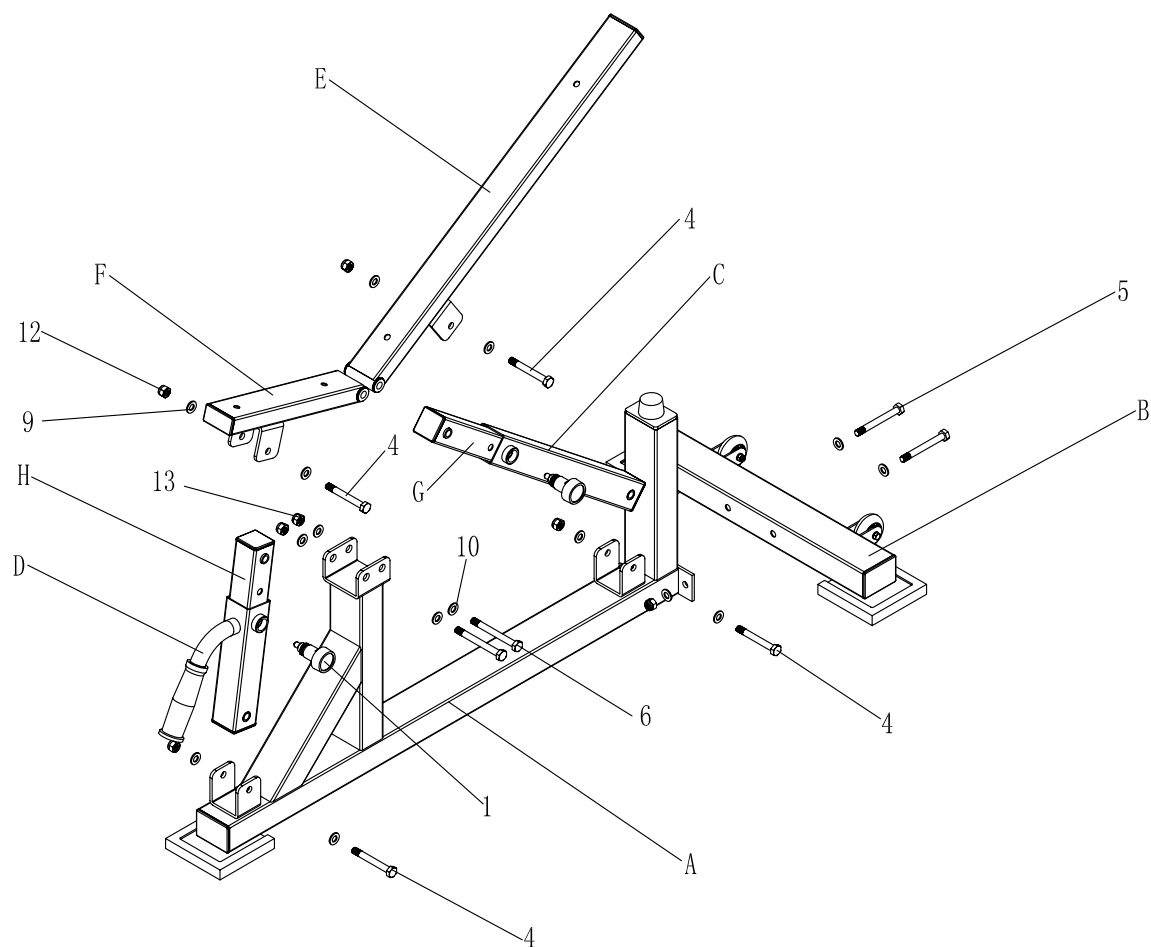Step 1



1. Attach (B) to (A) with the bolt M10*90(5) + washer 10(9) + lock nut M10(12).
2. Attach (C) to (A) with the bolt M10*80(4) + washer 10(9) + lock nut M10(12), attach (D) to (A) with the bolt M10*80(4) + washer 10(9) + lock nut M10(12).
3. Attach (E) and (F) to (A) with the bolt M12*100(6) + washer 12(10) + lock nut M12(13).
4. Attach (H) to (F) and (D) with the bolt M10*80(4) + washer 10(9) + lock nut M10(12) and fast pin M20(1).
5. Attach (G) to (C) and (E) with the bolt M10*80(4) + washer 10(9) + lock nut M10(12) and fast pin M20(1).

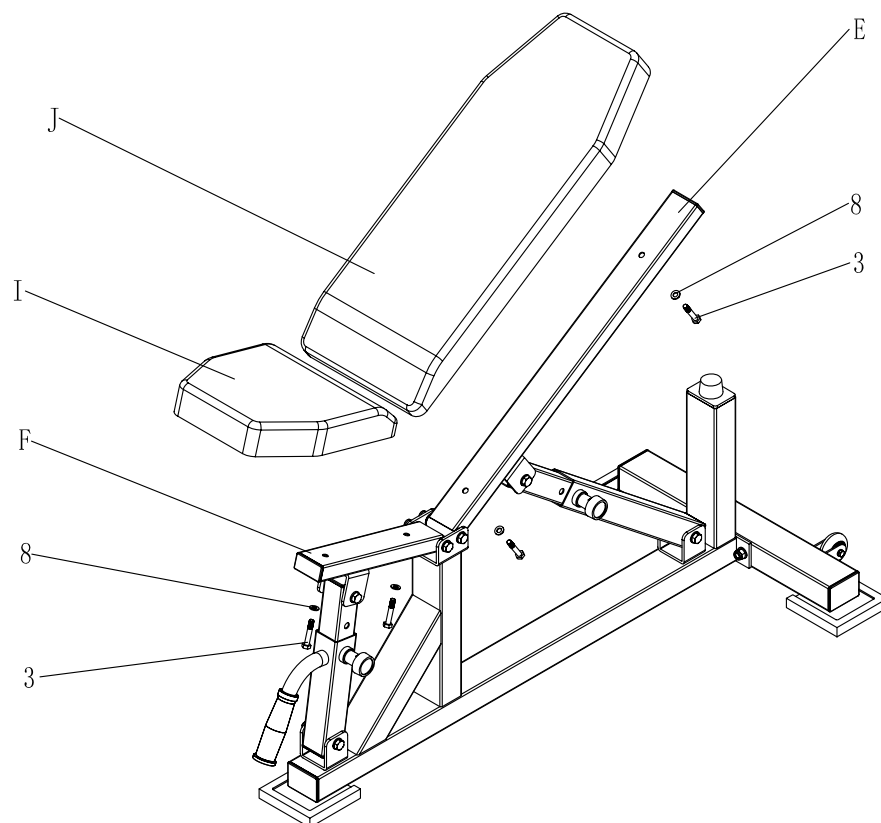Step 2



1. Attach (J) to (E) with the bolt M8*45(3) + washer 8(8).
2. Attach (I) to (F) with the bolt M8*45(3) + washer 8(8).



GARLANDO SPA
Via Regione Piemonte, 32 - Zona Industriale D1
15068 - Pozzolo Formigaro (AL) - Italy
www.toorx.it - info@toorx.it