

TOORX
FITNESS IN MOTION

MANUEL DE L'UTILISATEUR




WBX85



Cod : GRLDTOORXWBX85

Rev : 00

Ed : 07/18

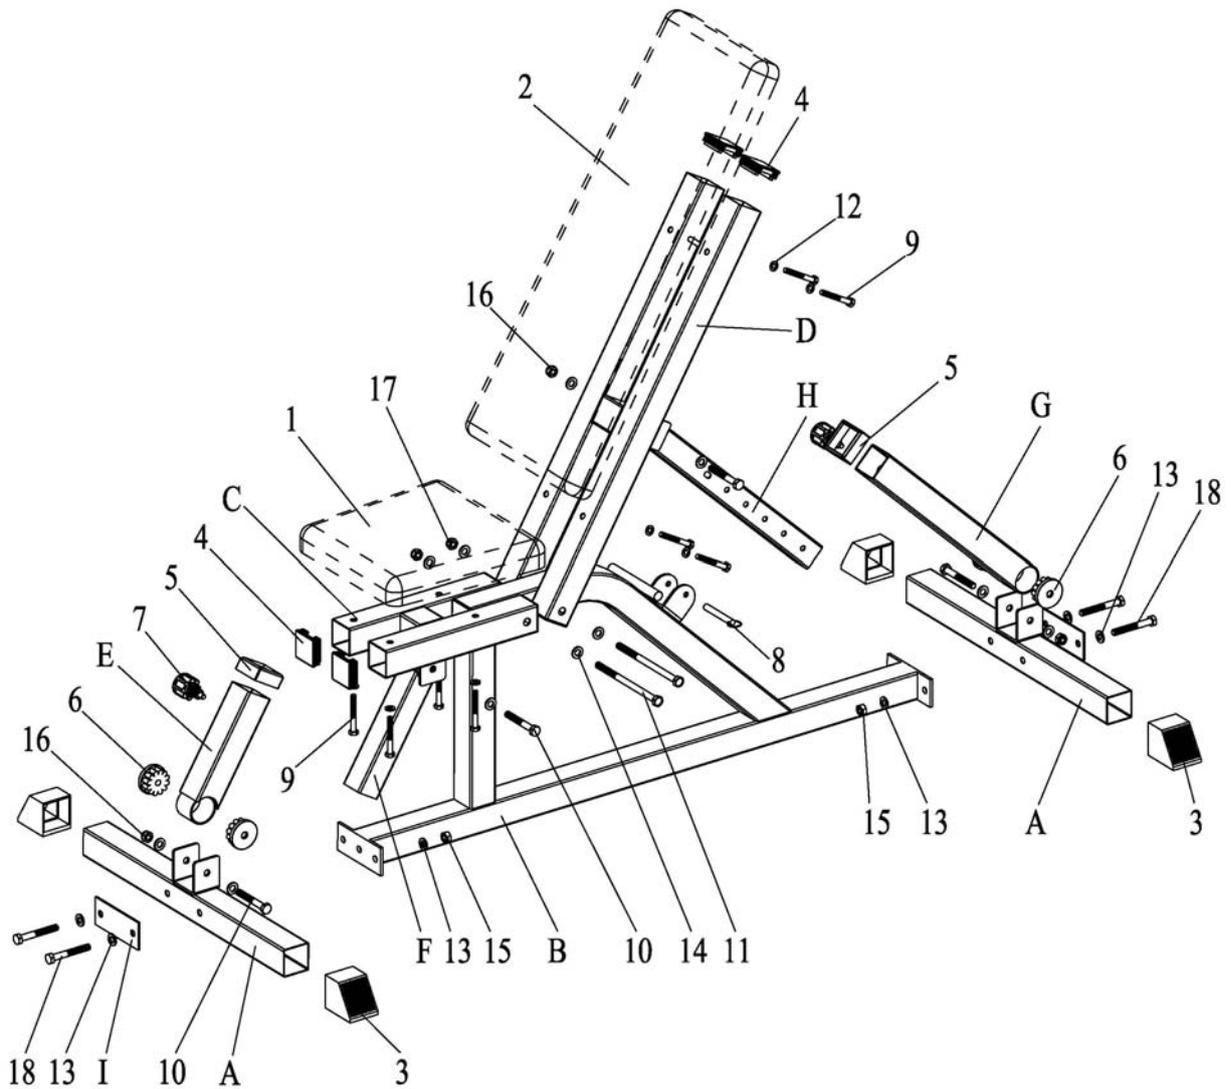


LISTE DES PIÈCES DE RECHANGE

NUMÉRO	DESCRIPTION	QUANTITÉ
A	BASE	2
B	MAIN FRAME	1
C	SEAT PAD SUPPORT	1
D	BACKREST PAD SUPPORT	1
E	FRONT ADJUSTMENT HOUSING	1
F	FRONT ADJUSTMENT TUBE	1
G	BACK ADJUSTMENT HOUSING	1
H	BACK ADJUSTMENT TUBE	1
I	JOINT PLATE	2

1	SEAT PAD	1
2	BACKREST PAD	1
3	SQUARE END CAP	4
4	SQUARE CAP	9
5	PLASTIC ADAPTER 50*45	2
6	PLASTIC BUSHING 50*10	8
7	FAST PIN	2
8	PIN	1
9	BOLT M8*65	8
10	BOLT M10*90	4
11	BOLT M12*170	2
12	WASHER 8	8
13	WASHER 10	16
14	WASHER 12	4
15	NUT M10	4
16	LOCK NUT M10	4
17	LOCK NUT M12	2
18	BOLT M10*75	4


INSTRUCTIONS DE MONTAGE

ÉTAPE 01

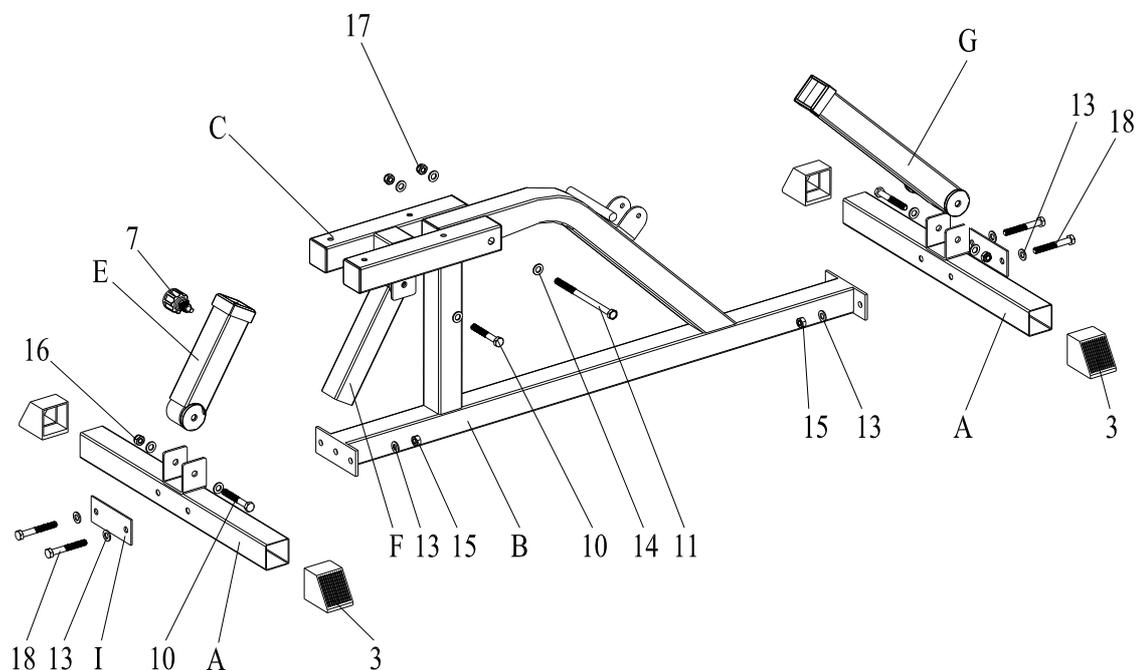

1. Assembler **A** à **B** avec **I**, **18**, **13** et **15**, puis pousser **3** sur **A**.
2. Assembler **E** à **A** avec **10**, **13** et **16**.
3. Assembler **C** et **E** avec **7**.
4. Assembler **F** à **C** avec **10**, **13** et **16**.
5. Assembler **C** à **B** avec **11**, **14** et **17**, puis assembler **F** à **E** avec **7**.
6. Assembler **G** à **A** avec **10**, **13** et **16**.

ÉTAPE 02

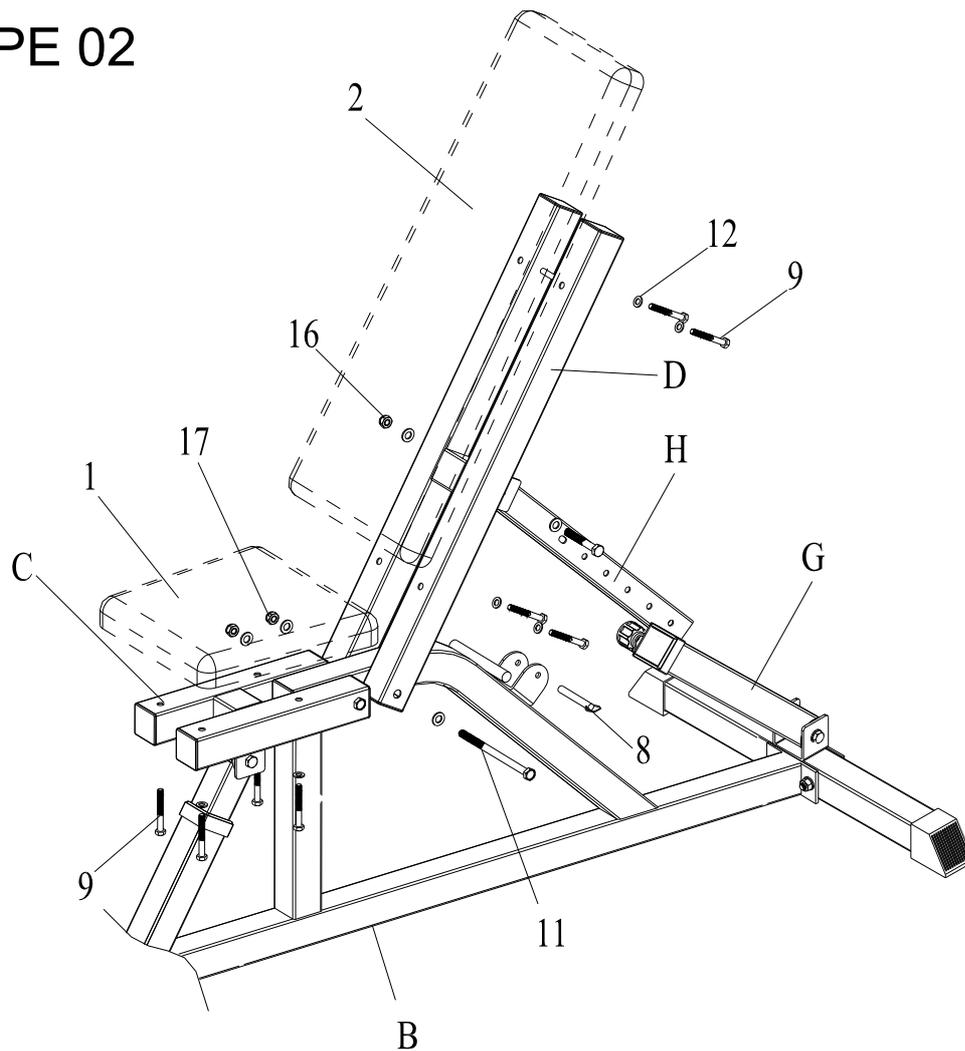

1. Assembler **H** à **D** avec **10**, **13** et **16**.
2. Assembler **D** à **B** avec **11**, **14** et **17**, puis assembler **H** et **G** avec **7** (ou assembler **H** à **B** avec **8**).
3. Assembler **1** à **C** avec **9** et **12**.
4. Assembler **2** à **D** avec **9** et **12**.



GARLANDO SPA
Via Regione Piemonte, 32 - Zona Industriale D1
15068 - Pozzolo Formigaro (AL) - Italy
www.toorx.it - info@toorx.it